

PANEL 1

C:\Programmi\Bluevel-2k10\

N	V [m/s] 2.5 m	PERF	BFS [mm]
1	491.7	N	23.00
2	473.2	N	22.00
3	491.3	N	30.00
4	502.3	N	
5	489.1	N	
6	472.6	N	

PANEL 2

C:\Programmi\Bluevel-2k10\

N	V [m/s] 2.5 m	PERF	BFS [mm]
1	491.7	N	21.00
2	473.2	N	31.00
3	491.3	N	32.00
4	502.3	N	
5	489.1	N	
6	472.6	N	

PANEL 3

C:\Program Files (x86)\Bluevel-

N	V [m/s] 2.5 m	PERF	BFS [mm]
1	491.7	N	22.00
2	473.2	N	34.00
3	491.3	N	37.00
4	502.3	N	
5	489.1	N	
6	472.6	N	

PANEL 4

C:\Program Files (x86)\Bluevel-


N	V [m/s] 2.5 m	PERF	BFS [mm]
1	491.7	N	22.00
2	473.2	N	28.00
3	491.3	N	30.00
4	502.3	N	
5	489.1	N	
6	472.6	N	

PANEL 1 - PANEL 2 - PANEL 3 - PANEL 4: LARGE SIZE

PERFORATIONS 0

MAX BFS 37

AVERAGE BFS 27.67 LIMIT BFS 36.26

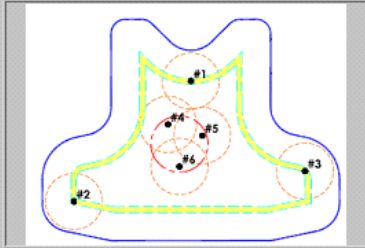

PANEL 5 - PANEL 6 - PANEL 7 - PANEL 8: SMALL SIZE

PERFORATIONS 1

MAX BFS 40

AVERAGE BFS 26.42 LIMIT BFS 38.22



PANEL 5

C:\Programmi\Bluevel-2k10\

N	V [m/s] 2.5 m	PERF	BFS [mm]
1	491.7	N	20.00
2	473.2	N	22.00
3	491.3	N	34.00
4	502.3	N	
5	489.1	N	
6	472.6	N	

PANEL 6

C:\Program Files (x86)\Bluevel-

N	V [m/s] 2.5 m	PERF	BFS [mm]
1	491.7	Y	31.00
2	473.2	N	32.00
3	491.3	N	40.00
4	502.3	N	
5	489.1	N	
6	472.6	N	

PANEL 7

C:\Program Files (x86)\Bluevel-

N	V [m/s] 2.5 m	PERF	BFS [mm]
1	491.7	N	20.00
2	473.2	N	20.00
3	491.3	N	18.00
4	502.3	N	
5	489.1	N	
6	472.6	N	

PANEL 8

C:\Program Files (x86)\Bluevel-

N	V [m/s] 2.5 m	PERF	BFS [mm]
1	491.7	N	30.00
2	473.2	N	32.00
3	491.3	N	18.00
4	502.3	N	
5	489.1	N	
6	472.6	N	

PANEL 1

C:\Programmi\Bluevel-2k10\bluevel_zip\pannello

N	V [m/s] 2.5 m	PERF	BFS [mm]
1	491.7	N	44.00
2	473.2	N	43.00
3	491.3	N	
4	502.3	N	
5	489.1	N	
6	472.6	N	

PANEL 1 - PANEL 2: LARGE SIZE

PERFORATIONS 0

MAX BFS 44



PANEL 2

C:\Programmi\Bluevel-2k10\bluevel_zip\pannello

N	V [m/s] 2.5 m	PERF	BFS [mm]
1	491.7	N	40.00
2	473.2	N	43.00
3	491.3	N	
4	502.3	N	
5	489.1	N	
6	472.6	N	

PANEL 3

C:\Programmi\Bluevel-2k10\bluevel_zip\pannello

N	V [m/s] 2.5 m	PERF	BFS [mm]
1	491.7	N	38.00
2	473.2	N	
3	491.3	N	
4	502.3	N	
5	489.1	N	
6	472.6	N	

PANEL 3 - PANEL 4: SMALL SIZE

PERFORATIONS 1

MAX BFS 47



PANEL 4

C:\Programmi\Bluevel-2k10\bluevel_zip\pannello nijbsf 1

N	V [m/s] 2.5 m	PERF	BFS [mm]
1	491.7	Y	47.00
2	473.2	N	
3	491.3	N	
4	502.3	N	
5	489.1	N	
6	472.6	N	